




OUTSIDE CURVE

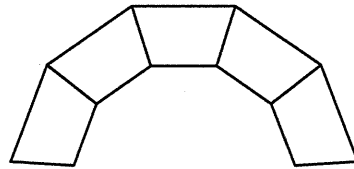

INSIDE CURVE

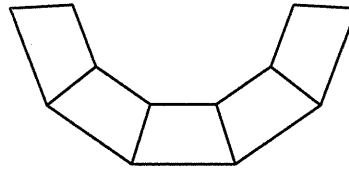


SAW CUT AS
REQUIRED TO
CONSTRUCT
90 DEGREE
MITERED
CORNER

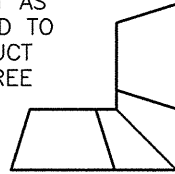

TOP



SPLIT FACE AND END

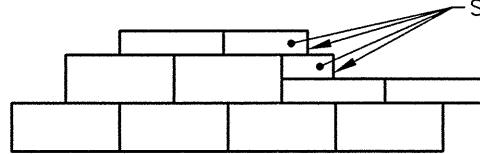

WALL FACE

1. ALWAYS START CAPPING WALL FROM THE LOWEST ELEVATION.
2. LAYOUT CAPS PRIOR TO USING ADHESIVE.
3. CUT CAPS TO FIT. VARIOUS COMBINATIONS OF LONG AND SHORT CAP FACES WILL BE NECESSARY FOR RADII GREATER THAN THE MINIMUM.
4. ALTERNATE SHORT AND LONG CAP FACES EVERY OTHER CAP TO ACHIEVE A STRAIGHT ROW OF CAPS.
5. USE EXTERIOR-GRADE CONSTRUCTION ADHESIVE TO SECURE CAPS.



These graphical representations are intended for preliminary design purposes only, and are not to be used for construction without the signature of a registered professional engineer.

All information herein © 2006 Anchor Wall Systems

Drawn By: _____

AWS

Date: _____

1/26/06

Scale: _____

NTS

Drawing Title: _____

**STONE CUT™ SERIES DIAMOND PRO™
CAXP BLOCK DETAILS**

Project Information: _____

ANCHOR RETAINING WALL SYSTEMS
TYPICAL WALL DETAILS